

M490

MILITARY STYLE COMBAT/TRENCH SHOTGUN

SOFT-M490L

OWNER'S MANUAL

FEATURES

- » Multi-burst Super Special Combat/Trench Spring Operation Shotgun
- » Fully Loaded with 4-position Twistable Telescopic Stock, Low Profile Tactical Rail, Front/Rear Sights and Pistol Grip
- » High Quality Polymer Construction with Matte Black Non-glare Finish
- » Muscle Spring Action with Most Dominant Force
- » Fastest Type of Aperture Sight- Windage/Elevation Adjustable Ghost Ring Sight for Quick Aiming under Most Demanding CQB/Combat Applications
- » Pistol Grip with Extra Storage of Spare Shot Shell Cartridge
- » Pump and Fire Full Power Combat Loads to Carry out Critical Missions or Airsoft Skirmish
- » Triple the Firing Fun - 3 BBs Simultaneously with Great Power and Pin Point Accuracy
- » Authentic Shot Shell Cartridge Holding up to 30 BBs for 10 Powerful Shots Per Shell
- » Allows Single Triple Shot and Continuous Everblast Triple Shots
- » Complete with Spare Shell, Speed Loader and Quality Sling
- » Optional, Most Affordable 6-to-a-pack Red/Green/Blue Spare Shot Shells

INCLUDED ACCESSORIES



Shot Shells



Deluxe Spring Operated
Speed Loader



Quality Sling

 


WARNING: NOT A TOY. FOR AGES 18 YEARS AND UP. MISUSE OR UNSAFE USE MAY CAUSE SEVERE INJURIES. EYE PROTECTION REQUIRED. The purchaser and the user should read and understand all instructions before using the gun and should OBEY all laws concerning the use and ownership of an airsoft gun. Do NOT BRANDISH OR DISPLAY THIS PRODUCT IN PUBLIC - it may confuse people and may be a crime. Police and others may think it is a firearm. Do not change the coloration and markings to make it look more like a firearm. This is dangerous and may be a crime.

Please pay attention: carelessness while shooting could cause injury.




MAKE SURE TO WEAR PROTECTIVE GLASSES TO PROTECT YOUR EYES.

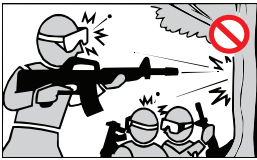

Make sure to wear protective glasses while shooting. Also be careful of BBs ricocheting off of hard objects. (Pay attention also to third party bystanders.)



 
DON'T AIM YOUR AIRSOFT GUN AT PEOPLE OR ANIMALS.

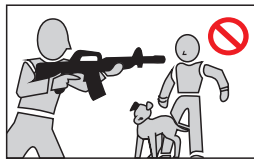

Never aim or shoot a person or animal as the target.



 THERE MAY BE SERIOUS CONSEQUENCES FROM MISCHIEVOUS SHOOTING.

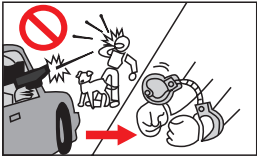

Mischievous shooting may damage public or personal property or injure a person or animal, causing serious consequences. Always treat airsoft sport seriously and have fun responsibly.



NEVER PULL THE TRIGGER WITH THE SAFETY BUTTON SET TO SAFE.



Pulling the trigger with the safety button being set to SAFE may damage the gun.



NEVER LOOK INTO THE MUZZLE AT ANY TIME.



Looking into the muzzle is extremely dangerous, regardless of BB loading condition. If a BB hits your eye, you may lose your sight.



 
AVOID PULLING THE TRIGGER CARELESSLY.



Shooting carelessly is extremely dangerous. Never put your finger on the trigger unless you are ready to shoot at a target.



ALWAYS DIRECT THE MUZZLE TOWARDS A SAFE DIRECTION.

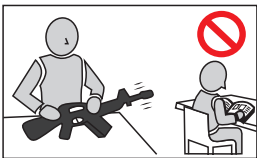

Never direct the muzzle towards a person, animal or other inappropriate directions.



NEVER SHOOT WHERE YOU MAY CROSS PATHS WITH PEOPLE OR TRANSPORTATION.




Select a safe place for shooting, avoiding places where people and cars are nearby.

The operation procedure varies according to the model. DO NOT operate the airsoft gun without fully understanding its features. Manufacturer and supplier are not responsible for any accidents, injuries or repair costs arising from wrong operation/handling or from modifications and disassembly of the airsoft gun.


Product Warnings

**ATTENTION - PLEASE READ BEFORE USE.****PLEASE PUT IN A BAG OR BOX WHILE TRANSPORTING YOUR AIRSOFT GUN.**

 While carrying the airsoft gun, always set the Safety Button to SAFE when not in use. Always put it in a bag or case.

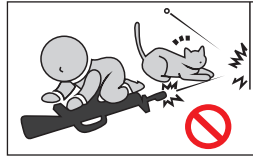**KEEP OUT OF REACH FROM CHILDREN.**

 
Always remove any remaining BBs and the battery before storage. Store the airsoft gun in a case or bag out the reach of children to avoid accidents.

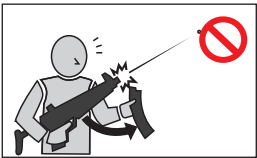**BBS MAY BE DISCHARGED EVEN IF THE MAGAZINE IS REMOVED.**

There may still be BBs left in the airsoft gun even though the shell cartridge has been removed. Pulling the trigger carelessly is extremely dangerous. After removing the shell cartridge, direct the muzzle towards a safe direction and pull the trigger to confirm that no BBs remain in the airsoft gun.

**DO NOT DISPLAY IN PUBLIC. POLICE AND OTHERS MAY THINK IT IS A REAL FIREARM!**

 Do not brandish in public; do not alter the coloration and warnings - such an action is dangerous and may be a crime.

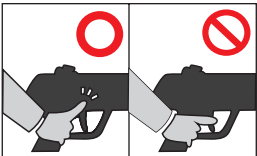**DO NOT PULL THE TRIGGER UNLESS YOU EXPECT TO SHOOT.**

Do not put your fingers on the trigger unless you are shooting at a target. Keeping your finger on the trigger may cause sudden discharge, which is dangerous.

**DO NOT DISASSEMBLE THE GUN BODY.**

Disassembly or modification of the airsoft gun could easily cause trouble, accident and adversely affect product performance.

**ATTENTION****NEVER DISASSEMBLE OR MODIFY THE AIRSOFT GUN.**

While using this product, please ensure the safety of the surrounding area where BBs can reach. Ensure safety of property and people, including spectators.

The muzzle should not be directed at any hard surface, such as glass, mirrors, furniture, cars, etc., that might cause BBs to break or ricochet.

Do not put your fingers into any gap of the airsoft gun body.

 
Make sure the airsoft gun is stored in a secure area where it won't easily fall, and is out of the reach of children.

Always treat the airsoft gun with the same respect and safety precaution as you would with a firearm.

Use .2g (6mm), precision ground BBs. Low quality BB pellets may clog and damage the rifle. Do not re-use BBs. Do not insert anything other than specified BBs into the magazine. Use any other ammunition may cause personal injury or damage to the airsoft gun.

COMPONENT CHART

UTG SPORT Military Style Multi-Burst
M490 Combat/Trench Shotgun
Model: SOFT-M490L

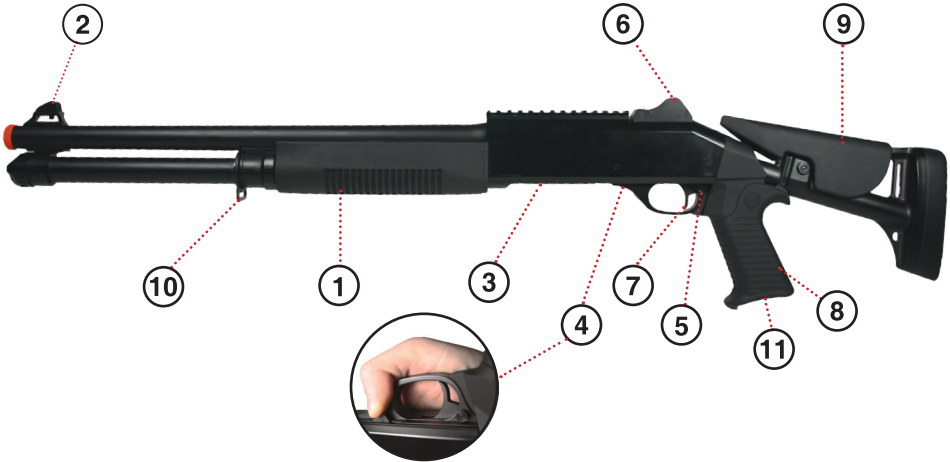

12



13



14

No.	Component Description	No.	Component Description
1	Pump Grip	8	Pistol Grip
2	Front Sight	9	Twistable Telescopic Stock
3	Shell Cartridge Compartment	10	Sling Hook
4	Shell Cartridge Compartment Lever	11	Spare Magazine Compartment
5	Safety Button	12	Magazine Shells
6	Rear Sight	13	Pellet Speed Loader
7	Trigger	14	Gun Sling

TO SET THE FIRE/SAFETY BUTTON POSITION:



Warning! Before you follow the assembly instruction, make sure to set the Fire/Safety Button to the “SAFE” position.

- Place the shotgun flat on a table in front of you with the barrel pointing to the left and the pistol grip bottom toward you.
- The Safety/Fire Button is on the “SAFE” position, if the Button is “Down” as in Fig. 1.
- The Safety/Fire Button is on “FIRE” position, if the Button is “Up” as in Fig. 2.
- To change the Safety/Fire position, press the button from one side to the opposite side.

BB PELLETS LOADING:

- Push Shell Cartridge Compartment Lever backward as in Fig. 3 to open Compartment Door and take out the Cartridge.
- Load 6mm BBs into the Speed Loader. Align Speed Loader to the Shell Cartridge receiving end as in Fig. 4.
- Push down on Speed Loader handle to inject BBs. The Shell Cartridge can hold up to 30 pellets.
- Detach the Speed Loader from Shell Cartridge.
- Place the Cartridge's metal head on the Compartment Door's Inner Step as in Fig. 5 and close the door to load the Cartridge.
- You can put a backup Magazine into the bottom of the grip as in Fig. 6.



Warning! Always use Precision Ground Premium 6mm BB Pellets for accuracy and safety. Never recycle pellets.

Activating the trigger carelessly is extremely dangerous. Never release the Safety Button or put your finger on the trigger unless you are ready to shoot at a target.



Fig. 1 - Safe



Fig. 2 - Fire

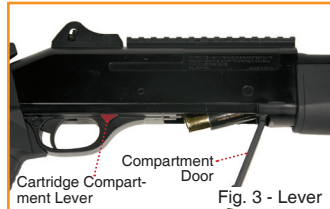 


Fig. 3 - Lever



Fig. 4 - BB's



Fig. 5 - Shell



Fig. 6 - Spare

FIRING

1. Single Triple-Shot Shooting

- Set Fire/Safety Button to the "FIRE" position as in Fig. 7.
- Briskly pull the Pump Grip backward toward yourself until it clicks, and push it forward to complete the cocking in one continuous movement.
Note: You must do this to fire every shot.

Aim at your target and pull the trigger to fire.

2. Everblast Triple-Shot Shooting

- Set Fire/Safety Selector to the "FIRE" position. Aim at your target.
- Squeeze and hold the trigger and, concurrently, pull the Pump Grip backward and push forward to shoot.
- By quickly moving the Pump Grip back and forth while holding the trigger, you can pump Triple-Shots out continuously.

TWISTABLE TELESCOPIC STOCK

- Press down and hold the Stock Adjustment button. Move the stock forward or backward to the most comfortable position before releasing the button. Fig. 8.
- Resting the stock butt pad against your shoulder, you can twist the gun to shoot at an angle if needed. Fig. 9.
- After shooting, collapse the butt stock to the shortest position for easy carry and storage.

MAINTAINENCE

- Keep the shotgun in clean condition.
- Regularly clean the barrel with soft cleaning rod. A few drops of silicone oil can be used to obtain smooth shooting performance.
- Always use Precision Ground Premium 6mm BB Pellets for accuracy and safety. Never use recycle BBs.
- Do not store BB's in the magazine when not in use. Springs will weaken over time if BB's remain inside.



Fig. 7 - Fire



Fig. 8 - Stock



Fig. 9 - Twist