


3rd Gen. Weaver Style High Profile Mounting System

⚠ Caution: Make sure firearm is not loaded; remove magazine and examine chamber. Use safe handling procedures at all time.

1. Pull out the receiver cover locking pin. Carefully and gently lift and remove the existing receiver cover. Do not pull too quickly which may result in sudden release of the bolt operating spring.



2. The scope mount is made intentionally longer than the original receiver cover. Gently file the front two prongs of the receiver cover mount if they are too long for your firearm. Do NOT over file. Maintain prong angle to insure a good snug fit.

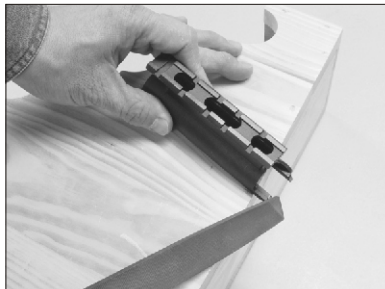


3. Place the mount in a vise with padded jaws for protection. Bend one of the front prongs very slightly. This will allow a snug fit of the cover both vertically and horizontally, and improve shooting accuracy.




4. Slide the scope mount onto receiver. Press it forward and down until the front prongs are inserted into the receiver completely.




5. Align the receiver cover locking pin with the pin hole on the rear of the scope mount.

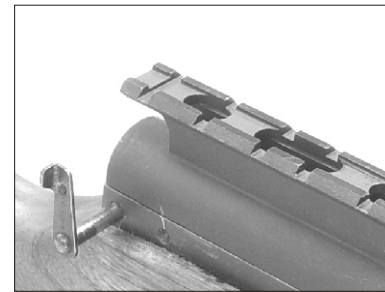


7. Test drive the bolt carrier and check the movement under the receiver cover mount to ensure that there is no obstruction to the bolt operation. Your scope mount is now fully seated and fitted into receiver, and is ready for ring and scope installation.

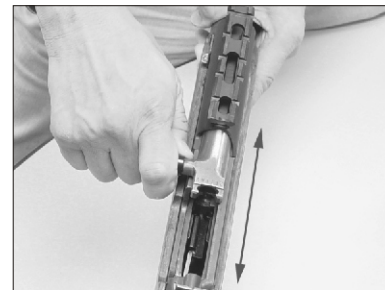


9. Put the rifle to your shoulder in your natural shooting position and adjust the scope eye relief until you achieve a full field of view. When you find the ideal eye relief, rotate the scope so that the crosshairs are vertical and perpendicular to the rifle.

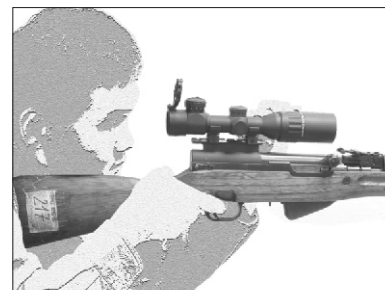

6. Drive the locking pin back to receiver by applying finger force or gentle rubber mallet force until the pin is flush with the receiver surface on the opposite end. Then, turn the locking pin handle forward to secure a tight lock. Due to different rifle variants, the rear pin hole area may need minor filing for best fit.

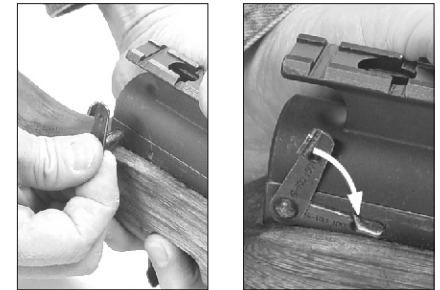

8. Fit the ring bases to the mount rail of the rifle. Remove the top halves of the rings and place your scope on the exposed fitted ring bases. Replace the top halves of the rings and finger tighten.

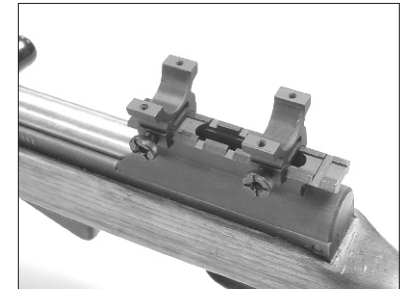

10. Tighten the screws on the rings to ensure a firm grip on the scope. **WARNING: Do not over-tighten the screws as you could cause damage to the scope body. The rings are properly installed now for the scope to be zeroed.**

